



# BAR CODE READER

Bar Code Reader (BCR) is designed to speed-up ICC usage. BCR is connected to ICC with USB. As default BCR supports Code-39 full ASCII and Data Matrix formats. Other formats available on request. BCR reads the barcode index and activates wanted function.



Data Matrix



Code-39 Full ASCII

Different ways to use barcode reader:

- User login
- Job queue (activates job from job queue)
- Automatic job (activates wanted recipe)
- Job ID (possibility to add unique job ID for each crimp)